

P0210

Diagnostic Trouble Code (DTC)	Application	Key On Engine Off	Key On Engine Running	Continuous Memory
P0181	All	GO to DB1	GO to DB1	—
P0182	NGV	GO to DB2	GO to DB2	GO to DB8
P0183	All	GO to DB2	GO to DB2	GO to DB7
P0190	All	GO to DD11	GO to DD11	GO to DD15
P0191	All	GO to DD16	GO to DD16	GO to DD16
P0192	All	GO to DD1	GO to DD1	GO to DD15
P0193	All	GO to DD7	GO to DD7	GO to DD15
P0201	All	GO to H56	GO to H56	GO to H56
P0202	All	GO to H56	GO to H56	GO to H56
P0203	All	GO to H56	GO to H56	GO to H56
P0204	All	GO to H56	GO to H56	GO to H56
P0205	All	GO to H56	GO to H56	GO to H56
P0206	All	GO to H56	GO to H56	GO to H56
P0207	All	GO to H56	GO to H56	GO to H56
P0208	All	GO to H56	GO to H56	GO to H56
P0209	All	GO to H56	GO to H56	GO to H56
P0210	All	GO to H56	GO to H56	GO to H56
P0211	All	GO to H56	GO to H56	GO to H56
P0212	All	GO to H56	GO to H56	GO to H56
P0217	5.4L SC Lightning	GO to DL100	GO to DL100	GO to DL100
P0218	All	See Note 3	See Note 3	See Note 3
P0230	NGV All Others	GO to KC1 GO to KA1	GO to KC1 GO to KA1	GO to KC40 GO to KA40
P0231	NGV All Others	GO to KC20 GO to KA20	GO to KC20 GO to KA20	GO to KC35 GO to KA35
P0232	NGV All Others	GO to KC10 GO to KA10	GO to KC10 GO to KA10	GO to KC30 GO to KA30
P0234	5.4L SC Lightning	GO to KJ1	GO to KJ1	GO to KJ1
P0243	5.4L SC Lightning	GO to KJ6	GO to KJ6	GO to KJ6
P0298	LS6/LS8	—	—	GO to DA130
P0300	All	—	GO to HD1	GO to HD1
P0301	All	—	GO to HD1	GO to HD1
P0302	All	—	GO to HD1	GO to HD1
P0303	All	—	GO to HD1	GO to HD1
P0304	All	—	GO to HD1	GO to HD1
P0305	All	—	GO to HD1	GO to HD1
P0306	All	—	GO to HD1	GO to HD1
P0307	All	—	GO to HD1	GO to HD1
P0308	All	—	GO to HD1	GO to HD1
P0309	All	—	GO to HD1	GO to HD1
P0310	All	—	GO to HD1	GO to HD1
P0320	All	GO to NC1	—	GO to NC1
P0325	Taurus/Sable 4.6L E-Series	—	GO to DG15	GO to DG15

P0210 - P0214: Testing and Inspection P0210

For diagnosis of code P0210 refer to chart

P0181 - P0325

If there is no link in the chart then:

- This code is not a valid code for this vehicle
- Or information published by the manufacturer for this vehicle did not include this code
-

For complete diagnosis of the Engine Control system, follow this link: [See: Powertrain Management/Computers and Control Systems/Testing and Inspection](#)

Diagnostic Trouble Code (DTC)	Application	Key On Engine Off	Key On Engine Running	Continuous Memory
P0500	Contour, Mystique, Cougar LS6/LS8, Continental, Town Car, Windstar Taurus SHO 4.2L, 5.4L, 6.8L F-Series O/8500 GVW Explorer/Mountaineer, Ranger, Excursion F-Series 4x4 U/8500 GVW (MSOF) All Others	— See Note 12 — — — — —	— See Note 12 — — — — —	GO to DP5 See Note 12 GO to DF1 GO to DF1 GO to DF1 GO to DP30 GO to DP1
P0501	Contour, Mystique, Cougar LS6/LS8, Continental, Town Car, Windstar Taurus SHO 4.2L, 5.4L 6.8L F-Series O/8500 GVW Explorer/Mountaineer, Ranger, Excursion All Others	— See Note 12 See Note 12 — — — —	— See Note 12 See Note 12 — — — —	GO to DP5 See Note 12 See Note 12 GO to DF1 GO to DF1 GO to DF1 GO to DP1
P0503	LS6/LS8, Continental, Town Car, Windstar All Others	See Note 12 —	See Note 12 —	See Note 12 GO to DP20
P0505 P0552 P0553	All All All	— GO to DT2 GO to DT2	GO to KE2 GO to DT2 GO to DT2	— GO to DT10 GO to DT10
P0602 P0603 P0605	All All All	See Note 11 GO to QB1 See Note 14	See Note 11 — See Note 14	See Note 11 — See Note 14
P0703 P0703	Continental, Town Car All except Continental, Town Car	GO to FD2 GO to FD2	GO to FD1 GO to FD1	— GO to FD3
P0704	Ranger, Explorer Expedition E/F-Series All Others	GO to TA1 GO to TA1 GO to TA1 GO to TA5	— — — —	GO to TA1 GO to TA1 GO to TA1 GO to TA5
P0705 P0707 P0708	All All All	See Note 3 — See Note 3	See Note 3 — See Note 3	See Note 3 See Note 3 See Note 3
P071x	All	See Note 3	See Note 3	See Note 3
P072x	All with Automatic Trans. All With Manual Trans.	— —	— —	See Note 3 GO to TJ1
P073x P074x	All All	— See Note 3	— See Note 3	See Note 3 See Note 3
P075x P076x	All All	See Note 3 See Note 3	See Note 3 See Note 3	See Note 3 See Note 3
P077x P078x	All All	— —	— —	See Note 3 See Note 3
P079x P0812 P0813	All All All	See Note 3 — —	See Note 3 — —	See Note 3 GO to TH1 See Note 3

P0500 - P0504: Testing and Inspection P0501

For diagnosis of code P0501 refer to chart

P0500 - P0813

NOTE 12: Vehicle Speed information is provided by the Antilock Brake System (ABS). Perform complete diagnosis, See: Brakes and Traction Control/Antilock Brakes / Traction Control Systems/Testing and Inspection

If there is no link in the chart then:

- This code is not a valid code for this vehicle
- Or information published by the manufacturer for this vehicle did not include this code
-

System Diagnosis

Diagnostic Trouble Code (DTC)	Application	Key On Engine Off	Key On Engine Running	Continuous Memory
P0500	Contour, Mystique, Cougar LS6/LS8, Continental, Town Car, Windstar Taurus SHO 4.2L, 5.4L, 6.8L F-Series O/8500 GVW Explorer/Mountaineer, Ranger, Excursion F-Series 4x4 U/8500 GVW (MSOF) All Others	— See Note 12 — — — — —	— See Note 12 — — — — —	GO to DP5 See Note 12 GO to DF1 GO to DF1 GO to DF1 GO to DP30 GO to DP1
P0501	Contour, Mystique, Cougar LS6/LS8, Continental, Town Car, Windstar Taurus SHO 4.2L, 5.4L 6.8L F-Series O/8500 GVW Explorer/Mountaineer, Ranger, Excursion All Others	— See Note 12 See Note 12 — — — —	— See Note 12 See Note 12 — — — —	GO to DP5 See Note 12 See Note 12 GO to DF1 GO to DF1 GO to DF1 GO to DP1
P0503	LS6/LS8, Continental, Town Car, Windstar All Others	See Note 12 —	See Note 12 —	See Note 12 GO to DP20
P0505 P0552 P0553	All All All	— GO to DT2 GO to DT2	GO to KE2 GO to DT2 GO to DT2	— GO to DT10 GO to DT10
P0602 P0603 P0605	All All All	See Note 11 GO to QB1 See Note 14	See Note 11 — See Note 14	See Note 11 — See Note 14
P0703 P0703	Continental, Town Car All except Continental, Town Car	GO to FD2 GO to FD2	GO to FD1 GO to FD1	— GO to FD3
P0704	Ranger, Explorer Expedition E/F-Series All Others	GO to TA1 GO to TA1 GO to TA1 GO to TA5	— — — —	GO to TA1 GO to TA1 GO to TA1 GO to TA5
P0705 P0707 P0708	All All All	See Note 3 — See Note 3	See Note 3 — See Note 3	See Note 3 See Note 3 See Note 3
P071x	All	See Note 3	See Note 3	See Note 3
P072x	All with Automatic Trans. All With Manual Trans.	— —	— —	See Note 3 GO to TJ1
P073x P074x	All All	— See Note 3	— See Note 3	See Note 3 See Note 3
P075x P076x	All All	See Note 3 See Note 3	See Note 3 See Note 3	See Note 3 See Note 3
P077x P078x	All All	— —	— —	See Note 3 See Note 3
P079x P0812 P0813	All All All	See Note 3 — —	See Note 3 — —	See Note 3 GO to TH1 See Note 3

P0605 - P0609: Testing and Inspection

For diagnosis of code P0605 refer to chart

P0500 - P0813

NOTE 14: Be sure to check for aftermarket performance products before replacing PCM. (If replacement is necessary refer to Flash Electrically Erasable Programmable Read Only Memory - Flash EEPROM.) See: Powertrain Management/Computers and Control Systems/Testing and Inspection/Programming and Relearning

If there is no link in the chart then:

- This code is not a valid code for this vehicle
- Or information published by the manufacturer for this vehicle did not include this code
-

Diagnostic Trouble Code (DTC)	Application	Key On Engine Off	Key On Engine Running	Continuous Memory
	All others	—	GO to DG1	GO to DG1
P0326	Taurus/Sable 4.6L E-Series	—	GO to DG15	GO to DG15
	All others	—	GO to DG1	GO to DG1
P0330	Taurus/Sable 4.6L E-Series	—	GO to DG15	GO to DG15
	All Others	—	GO to DG1	GO to DG1
P0331	Taurus/Sable 4.6L E-Series	—	GO to DG15	GO to DG15
	All Others	—	GO to DG1	GO to DG1
P0340	All	—	GO to DR1	GO to DR1
P0350	All	—	GO to JB1	GO to JB1
P0351	w/Coil Pack	—	GO to JE1	GO to JE1
	w/Coil-On-Plug	—	GO to JF1	GO to JF1
P0352	w/Coil Pack	—	GO to JE1	GO to JE1
	w/Coil-On-Plug	—	GO to JF1	GO to JF1
P0353	w/Coil Pack	—	GO to JE1	GO to JE1
P0353	w/Coil-On-Plug	—	GO to JF1	GO to JF1
P0354	w/Coil Pack	—	GO to JE1	GO to JE1
	w/Coil-On-Plug	—	GO to JF1	GO to JF1
P0355	All	—	GO to JF1	GO to JF1
P0356	All	—	GO to JF1	GO to JF1
P0357	All	—	GO to JF1	GO to JF1
P0358	All	—	GO to JF1	GO to JF1
P0359	All	—	GO to JF1	GO to JF1
P0360	All	—	GO to JF1	GO to JF1
P0401	All	—	—	GO to HE70
P0402	All	—	GO to HE20	GO to HE20
P0411	All	GO to HM7	GO to HM7	GO to HM7
P0412	All	GO to HM1	GO to HM1	GO to HM1
P0420	All	—	—	GO to HF1
P0430	All	—	—	GO to HF1
P0442	All	—	—	See Note 15
P0443	All	GO to HX2	GO to HX2	GO to HX1
P0451	All	—	—	GO to Z1
P0452	All	GO to HX26	GO to HX26	GO to HX26
P0453	All	GO to HX33	GO to HX33	GO to HX33
P0455	All	—	—	See Note 15
P0456	All	—	—	See Note 15
P0457	All	—	—	GO to HX43
P0460	All	GO to HX76	GO to HX76	GO to HX76
P0461	All	—	—	GO to Z1

P0350 - P0354: Testing and Inspection P0351

For diagnosis of code P0351 refer to chart

P0326 - P0461

If there is no link in the chart then:

- This code is not a valid code for this vehicle
- Or information published by the manufacturer for this vehicle did not include this code
-

For complete diagnosis of the Engine Control system, follow this link: [See: Powertrain Management/Computers and Control Systems/Testing and Inspection](#)

For complete diagnosis of the Engine Control system, follow this link: See: Powertrain Management/Computers and Control Systems/Testing and Inspection